


Checking Projector Status

If your projector isn't working correctly, first turn it off and unplug it. Then plug the power cord back in and turn on the projector. If this doesn't solve the problem, check the lights on top of the projector.

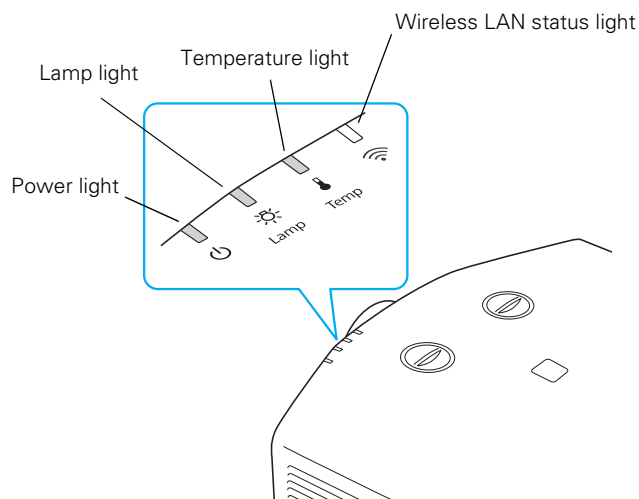


What To Do When the Lights Flash

The lights on top of the projector indicate the projector's status.














Refer to the following table for a complete description of the projector's status lights:



Status lights

Light	Status	Description
	Orange	The projector is in sleep or standby mode. You can unplug it or press the P power button to turn it on.
	Flashing green	The projector is warming up. Wait for the image to appear.
	Green	The projector is operating normally.

Status lights (continued)

Light	Status	Description
	Flashing orange	The projector is cooling down. You can't turn it back on (and you should not unplug it) until the light stops flashing and remains orange. The projector is setting itself up for network monitoring.
	Flashing green	The air filter may be clogged. Clean or replace the air filter.
	Red or flashing red	There is a problem with the projector. Check the other two lights.
	Flashing orange	It's time to replace the lamp. If you continue to use the lamp after the replacement warning, there is an increased possibility that the lamp may break.
	Flashing orange	Rapid cooling is in progress. Although this is not an abnormal condition, projection will stop automatically if the temperature rises higher. Make sure there is plenty of space around and under the projector for ventilation, and that the vents are clear. The air filter may be clogged. Clean or replace the air filter.
	Red	The projector is overheating, which turns the lamp off automatically. Wait until the projector switches to standby mode (about 5 minutes). Make sure the room temperature is not outside the required temperature range of the projector and there is plenty of space around and under the projector for ventilation. The air filter may be clogged. Clean or replace the air filter. If you're using the projector above an altitude of 4,900 feet (1,500 meters), turn on High Altitude Mode in the Operation menu If the projector continues to overheat after you clean the air filter, the problem may be caused by damage to the cooling fan or temperature sensor. Contact Epson for help. Warning: Except as specifically explained in this <i>User's Guide</i> , do not attempt to service this product yourself.
 	Flashing red	Power is cut off because of an internal problem. Unplug the power cord and contact Epson for help.
  	Flashing red	

Status lights (continued)

Light	Status	Description
	Flashing red	There is a problem with the fan or temperature sensor. Stop using the projector, disconnect the power cord, and contact Epson.
	Flashing red	<p>The lamp may be burnt out. First make sure the lamp cover is securely installed. If that's not the problem, the air filter may be clogged. Clean or replace the air filter.</p> <p>If this does not resolve the problem, let the lamp cool and then remove it. If the lamp is cracked, replace it. If the lamp is not cracked, reinstall it. If reinstalling doesn't work, replace the lamp.</p> <p>If you're using the projector above an altitude of 4,900 feet (1,500 meters), turn on High Altitude Mode in the Operation menu</p> <p>If none of these suggestions resolves the problem, contact Epson.</p>